


***ADJUSTMENT INSTRUCTIONS FOR  
YOUR KINETIC ADJUSTABLE TABLE  
LAMP***

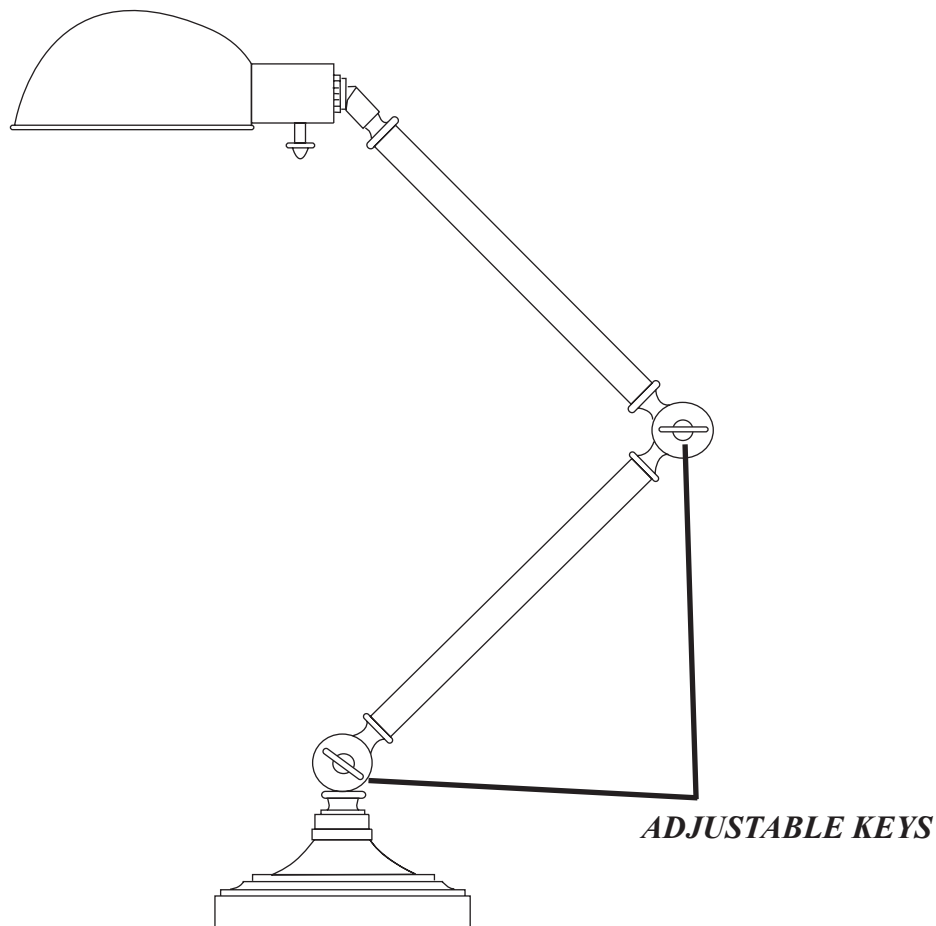

***ADJUSTMENT INSTRUCTIONS***

- 1- LOOSEN ADJUSTABLE KEY FOUND ON THE SWIVEL.
2. ADJUST HEIGHT TO DESIRED POSITION.
3. TIGHTEN ADJUSTABLE KEY.

TO CLEAN...USE A SOFT DRY CLOTH AND SIMPLY WIPE CLEAN. DO NOT USE ANY CHEMICALS OR ABRASIVE CLEANERS.

***POLARIZED PLUG***

This lamp has a polarized plug, one blade is wider than the other. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.